

### Setup

This note tells you how to test your CDOAN-DNP3 software to make sure it operates correctly as both a master and outstation. These instructions ask you run two copies of CDOAN-DNP3 on the same computer and configure them to talk to each other.

Start one copy of CDOAN-DNP3. This will operate as an outstation

- From the **Config** view, select **Configure Sample Outstation**
- Select **OK** from the resulting menu without modifying any of the default settings
- From the **Communication** pull-down menu, select **Outstation**

Start a second copy of CDOAN-DNP3. This will operate as a master

- From the **Config** view, select **Configure Sample Master**
- Select **OK** from the resulting menu without modifying any of the default settings
- From the **Communication** pull-down menu, select **Master**

You should now be communicating.

### Introduce Data Changes

What you should be seeing now is basic communication. If you want to generate a point change, then:

- From the copy of CDOAN-DNP operating as a master, select **View** and **Point Data**
- From the copy of CDOAN-DNP operating as an outstation, select the **Outstation** target near the bottom left corner of the window. Enter a value of 1 in any of the binary points shown at the top of the view
- Go back to the copy of CDOAN-DNP operating as a master. You should see your new point state in the point list, possibly with a time stamp
- From either copy of CDOAN-DNP3, select **View** and **Change Events**. You should see a record of the reported DNP3 event